

Pairing The ESCTP-RF To A Room Thermostat

Pairing With ES RTP4 Touch Room Thermostat

- On your ES RTP4 Touch room thermostat, tap the **HOME** button to wake up the buttons
- Hold the **MENU** button until the display changes to RF SETUP
- Tap **SELECT**; you will see digits counting upwards
- Remove the rear cover from your ESCTP-RF cylinder thermostat
- Looking in the back of your ESCTP-RF, you will see a small black button at the top right labelled **PAIR RF**, hold this button until the display shows PAIR
- When PAIR disappears, you will see SET

Your room thermostat & cylinder thermostat are now paired.

Pairing With ES RTP6WHW & ES RTP6B (Stratus) Room Thermostats

- On your room thermostat, tap the **HOME** button to wake up the display
- Hold the **MENU** button until you see RF SETUP
- Tap the **HOME** button, you will see digits counting upwards
- Remove the rear cover from your ESCTP-RF cylinder thermostat
- Looking in the back of your ESCTP-RF, you will see a small black button at the top right labelled **PAIR RF**, hold this button until the display shows PAIR
- When PAIR disappears, you will see SET

Your room thermostat & cylinder thermostat are now paired.

Pairing With ES RTP8W (Mistral) Room Thermostat

- On your room thermostat, tap the **HOME** button to wake up the display
- Hold the **NEXT** button until you see RF SETUP
- Tap the **NEXT** button; you will see digits counting upwards
- Remove the rear cover from your ESCTP-RF cylinder thermostat
- Looking in the back of your ESCTP-RF, you will see a small black button at the top right labelled **PAIR RF**, hold this button until the display shows PAIR
- When PAIR disappears, you will see SET

Your room thermostat & cylinder thermostat are now paired.