

## Programmer - Landlord Service Interval

1. Lift the front cover of your programmer to reveal the buttons underneath.
2. Ensure the slider bar is in the **RUN** position.
3. Hold the **+** button, **COPY** button and **HOME** button until you see **COdE** on the display.
4. Enter the code, using the **+** & **-** buttons to select the number and the **DAY** button to move to the next digit. The default code is **0000**.
5. When all four digits have been set, press **>>** & you will see **En** and either **ON** or **OFF**.
6. To set the Service Interval use the **+** button to select **ON**.
7. Press **>>** and you will see **SHO** and either **ON** or **OFF**. This is asking if you would like to display an engineer telephone number on the display when a Service Interval is due.
8. Use the **+** button to select **ON** if you would like to display a telephone number. If you do not wish to display a telephone number, please skip to step 13.
9. Press **>>** and you will see **ArEA**. This is the dialling code.
10. Use **+** & **-** to select the number and **DAY** to move onto the next digit.
11. Press **>>** and you will see **tELE**. This is where you can enter the remainder of the phone number.
12. Use **+** & **-** to select the number and **DAY** to move onto the next digit.
13. Press **>>** and you will see **duE**. This is asking you how many days in the future you would like the Service Interval to be set for.
14. Use **+** & **-** to select the number and **DAY** to move onto the next digit.

15. Press >> and you will see **ALAr**. Here you can select a number between **0** and **31** days prior to the service set date to display the engineers phone number which was set in steps 9 and 10.
16. Use + & - to select the number.
17. Press >> see **tYPe**. Here, you can select from the following
  - 0**: Reminds the user when the annual service is due by alternating between displaying **SER** and the maintenance telephone number in the screen according to installer set settings.
  - 1**: Reminds the user when the annual service is due by alternating between displaying **SER** and the maintenance telephone number in the screen according to installer set settings and only allows the system to run in manual operation for 60 minutes.
  - 2**: Reminds the user when the annual service is due by alternating between displaying **SER** and the maintenance telephone number in the screen according to installer set settings and does not allow the system to run (permanently OFF).
18. Use + & - to select the setting you require.
19. Press >> and you will see **nE** followed by 4 digits. This is where you can change the PIN code you entered at step 4.
20. Use + & - to select the number and the **DAY** button to move onto the next digit.
21. Press >> to confirm your new PIN and you will see **SEt** on the display.
22. Press the **HOME** button to exit the menu and return to your home screen.