

Programmer – Select Schedule Mode

1. Move the slider bar to **PROG**.
2. Use >> to select the zone you wish to change. The flashing icon will be the selected zone.
3. Use + under the display to choose between the following:
 - **ON** will set your heating/hot water ON permanently. No programs will run.
 - **OFF** will set your heating/hot water OFF permanently. No programs will run.
 - **AUTO** will run your timed programs.
 - **ALL DAY** will switch your heating/hot water ON from your first programmed ON time until your last programmed OFF time.
4. Move the slider bar to **RUN**.