

Series 4 RF Pairing

If your RF receiver and room thermostat RF bond is lost, follow the instructions below.

1. On your RF receiver, press & hold the **M/A** button until the MANUAL button flashes green. Release the button.
2. On your thermostat, move the slider bar to the OFF position.
3. Hold the **A** button, **H** button & **+** buttons until the green light on your RF receiver stops flashing.
4. Move the slider bar to AUTO.

If both of the buttons on your RF receiver are flashing, isolate the power to your RF receiver for a full 10 minutes, then switch it back on and follow the steps above.