

## Series 5 – Set The Time & Date

1. Wake up your thermostat display by pressing either < or > buttons.
2. Hold the > button until you see **TINE**. Release the > button.
3. Press > once and you will see the hour flashing. Use the dial to select the correct hour.
4. Press > and the minutes will flash. Use the dial to set the correct minutes.
5. Press > and the day will flash. Use the dial to set the day.
6. Press > and the month will flash. Use the dial to select the correct month.
7. Press the > button and you will see the year flashing. Use the dial to select the correct year.
8. Press the > button and use the dial to select 12H – 12hour clock or 24H – 24hour clock.
9. Press the > button and you will see the hour flashing again.
10. Press the < button to get back to TINE.
11. Press the < button again to return to your home screen. The current room temperature will be displayed