

ESRTP4Touch – Heating Only or Heating & Hot Water

1. Press **HOME** to wake the display.
2. Hold the **MENU** button until you see RF SETUP. Press **SELECT**.
3. Use **ΛV** to navigate to HEATING TYPE. Press **SELECT**.
4. Use **ΛV** to select between HEAT ONLY or HEATING & HOT WATER.
Press **SELECT**. The display will show SAVING.
5. Tap **HOME** to exit the menu.