

ESRTP4 TOUCH – Pairing With RF Receiver

1. On your RF receiver, hold down the right-hand button (tap icon). Keep it pressed until the left button (flame icon) flashes with a red light.
2. On your thermostat, tap the **HOME** button.
3. Hold your finger on the **MENU** button until you see RF SETUP on the display.
4. Press the **HOME** button – You should see RF PAIR and the centre of the display should show a counter. This will disappear and show SAVING. The display will then return to your main screen. Your thermostat & RF receiver should now be paired