

Series 6 - Change Preset Temperatures

1. Press the **HOME** button – this is the circular button under the display.
2. Press the **MENU** button – this is the button with 3 horizontal lines under the display. The display should show **SET TIME**
3. Use the **^** button to select **SYSTEM MODE SETTINGS**
4. Press the **HOME** button
5. Use the **^** & **v** buttons to choose between **SLEEP** or **AWAY**
6. Press the **HOME** button
7. Use the **^** & **v** buttons to set the temperature you would like as your personalised temperature
8. Press the **HOME** button – you will see **SAVING** on the display, followed by **SYSTEM MODE SETTINGS**
9. Use the **RETURN ARROW** to exit the menu.