

## Series 6 - Heating Type

1. Press the **HOME** button to wake the display (Circular button under the display)
2. HOLD the **MENU** button (3 horizontal lines) until you see **RF SETUP**.  
Release the **MENU** button.
3. Tap **^** until you see **HEATING TYPE**
4. Tap the **HOME** button.
5. Use **^** & **v** to choose between **HEAT ONLY** or **HEATING & HOT WATER**
6. Tap the **HOME** button.
7. Tap the **RETURN ARROW** to return to exit the menu.