

ESRTP4RFW – Set The Time & Date

1. Tap the **TIME/DATE** button.
2. The hour digits will be flashing. Use **+/-** to set the correct hour. Press the **>>** button and you should see the minute digits flashing
3. Use **+/-** to set the correct minutes. Press the **>>** button and you should see the first date digits flashing.
4. Use **+/-** to set the correct day of the month. Press the **>>** button and you should see the month digits flashing.
5. Use **+/-** to set the correct month. Press the **>>** button and you should see the year digits flashing.
6. Use **+/-** to set the correct year. Press the **>>** button and you should see the time format flashing.
7. Use **+/-** to select either 12 hour clock or 24 hour clock.
8. Tap the **HOME** button to exit the **TIME/DATE** menu.