


### **STRATUS**

# Wi-Fi Wireless Programmable Room Thermostat With Heating & Hot Water Control ESRTP6B User Instructions





### **Quick Reference Guide**

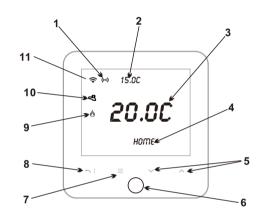

- 1. RF Connection Status
- **2.** SET Temperature
- 3. ROOM Temperature
- 4. MODE Display
- 5. UP/DOWN Arrows
  - Temperature change
  - Navigate through menus
  - Change settings
- **6.** HOME Button
  - Select options in menus
  - Change settings
- **7.** MENU Button
  - Access menus & sub-menus
- 8. Return Button
  - Return to Home or previous screen
- 9. Flame Icon
  - Indicates heating is on
- 10.Tap Icon
  - Indicates hot water is on
- 11.Wi-Fi Connection Status

### **Setting The Time & Date**

If your thermostat is **not** connected to your home Wi-Fi, you will need to follow these steps during initial setup & after a power outage.





Press **HOME** to wake the display. Press **MENU** & use **\LambdaV** to show SET TIME. Press **HOME** & use **\LambdaV** to choose either 12 or 24 hour clock. Press **HOME**  Use  $\Lambda V$  to change the hours then press **HOME** to move onto the minutes. Use  $\Lambda V$  to change the minutes. Press **HOME** to save.





Press **HOME** to enter the date settings. Use  $\Lambda V$  to change the date & **HOME** to move to the next digits.


Press **SELECT** to save your settings.

### **Heating Mode**

To change the heating mode, tap the **HOME** button until the desired heating mode is selected:

- **HOME** Programs will run.
- MANUAL Manual mode will maintain the SET temperature constantly.
- AWAY Away mode sets the user defined Away temperature. This is a permanent setting until the mode is changed.
- SLEEP Sleep mode sets the user defined
   Sleep temperature. This mode will continue
   until the first program of the following day.

### **Setting Sleep & Away Temperatures**

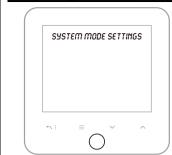

Press **HOME** to wake the display. Press **MENU** & use **AV** until you see SYSTEM MODE SETTINGS Press **HOME**. Use **AV** to choose either SLEEP or AWAY then press **HOME**.



Use **AV** to set your preferred SLEEP or AWAY temperature. Press **HOME** to save & use the **RETURN BUTTON** to exit the menu.

### **Temporary Override – Heating**

When your ESi STRATUS is in HOME mode, you can temporarily override the current SET temperature by using the **AV** buttons. The temporary override will end when the next program starts which is indicated by the 'TO' time.



### **Temporary Override – Hot Water**



Wake the display by pressing the **HOME** button. Touch & Hold the **HOME** button until HOT WATER BOOST is displayed. Use the **AV** buttons to select the desired setting. Press **HOME** to save your setting & use the **RETURN BUTTON** to get back to your HOME SCREEN.

# **Choose A Heating/Hot Water Schedule**



Press **HOME** to wake the display. Press **MENU** & use **\( \Lambda V \)** to navigate to SET SCHEDULE. Use **\( \Lambda V \)** to choose either HEATING or HOT WATER



Press HOME & use

AV to choose a
schedule. Press

HOME to save. There
are 3 schedules to
choose from: 7 Day
24 Hour or 5-2 Day.

7 Day – Different programs for each day. Every day will need to be set independently.
24 Hour – Every day will run the same programs.
5-2 Day – One program for weekdays with a

## **Setting Heating Programs**

different program for weekends.

Your ESi STATUS has a pre-set heating profile as shown below, which you can change to your own heating programs.

EVENT		Time	Temp	EVENT		Time	Temp
Week Days	1	06:00 - 08:00	20°C	Weekends	1	07:30 - 09:30	20°C
	2	08:00 - 17:00	15°C		2	09:30 - 16:30	20°C
	4	17:00 - 22:00	21°C		4	16:30 - 22:30	21°C
	5	22:00 - 06:00	15°C		5	22:30 - 07:30	15°C





Press **HOME** to wake the the display. Press **MENU** and use **AV** to navigate to HEATING AND HOT WATER SCHEDULE.

Press **HOME** to enter HEATING SCHEDULE. Use **AV** to select the days you wish to change. Press **HOME**.

Press HOME.



Use **AV** to change the times and temperatures & **HOME** to confirm and move to the next time/temperature. Use **HOME** to save your Programs.



Repeat these steps until all programs have been set. Press **HOME** to save

### **Setting Hot Water Programs**



Press **HOME** to wake the display Press MENU & use **AV** to navigate to **HEATING AND HOT** WATER SCHEDULE. Press HOME.



Use  $\Lambda V$  to set your  $1^{st}$ HOT WATER start time. Press **HOME** & use **\Lambda V** to set your 1st HOT WATER end time. Press HOME.



Use **\( \V \)** to select **HOT WATER** SCHEDULE. Press **HOME** & Use **\Lambda V**. to select the days you wish to change. Press **HOME**.



Repeat these steps until you have set all programs. Press **HOME** to save your settings & use the **RETURN BUTTON** to exit the menu.

### **Number of Programs**

Your ESI STRATUS can run either 4 or 6 daily programs.




Press **HOME** to wake the display. HOLD the **HOME** until the display shows RF SETUP. Press HOME



Use **AV** to choose either 4 or 6 programs. Press **HOME** to save.

### **Display Settings - Brightness**

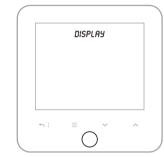

Press **HOME** to wake the display, then press MENU. Use ΛV to navigate to DISPLAY. Press HOME.




Press **HOME** to enter brightness settings.



Use **AV** to change the brightness level. Press **HOME** to save. Use the **RETURN BUTTON** to get back to your HOME SCREEN.

### **Display Settings – Display Modes**

The ESI STRATUS has 3 different display modes.

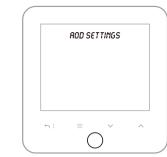

Press **MENU** to wake the display. Use **AV** to navigate to AOD SETTINGS. Press **HOME.** 



Use **AV** to navigate to **AOD SETTINGS MODE** Press **HOME**, you will see **AOD MODE 1**.Use **AV** to see **MODE 2** or **MODE 3.** Press **HOME** to select:


**MODE 1** – display will always be on.

**MODE 2** – display will stay on until your overnight program starts, then it will go to sleep. **MODE 3** – display will go to sleep after a short delay and will stay off until a button is pressed.

When you have chosen your Display Mode, use the **RETURN BUTTON** to get back to your HOME SCREEN.

#### **Holiday Mode**

Holiday mode will let you set a minimum temperature for the duration of your holiday. When Holiday Mode is set no programs will run.

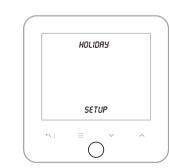

Press **HOME** to wake the display. Press **MENU** and use ΛV to navigate to HOLIDAY SETUP. Press HOME.



Use **AV** to enter the number of days you expect to be away. Press HOME.



Use **\( \V**\) to set your minimum temperature while you are away. Press HOME.



Holiday Mode will start immediately. The display will show the number of days remaining until Holiday Mode ends. When Holiday Mode ends, HOME Mode will resume.

To cancel Holiday Mode at any time, tap the **HOME** button to wake the display, then tap the **HOME** button twice.

### Pairing With The ESi Centro App

You can use your smartphone or tablet to regulate your heating by downloading the ESi Centro app. Simply follow the instructions on the app to pair your thermostat to your home network.

Warning: Interference with sealed parts renders the warranty void.

In the interests of continuous product improvement, we reserve the right to alter designs, specifications and materials without prior notice and cannot accept liability for errors.



**Energy Saving Innovative Controls Limited** www.esicontrols.co.uk

We are continuously developing our products to bring you the very latest in energy saving technology and simplicity. However, should you have any questions regarding setting up your controls please email us at tech@esicontrols.co.uk

Version 1.0