

## Series 8 - Heating Type

1. Hold the ►► button until the display shows RF SETUP.
2. Use the **DIAL** to select HEATING TYPE.
3. Press the ►► button.
4. Use the **DIAL** to choose between HEAT ONLY or HEAT AND HOT WATER.
5. Press the ►► button. The display will show SAVING.
6. Press the **HOME** button to exit the menu.