

## **Series 8 – Pairing With RF Receiver**

1. On your RF receiver, hold the right-hand button (tap icon).  
Keep it pressed until the left button (flame icon) flashes with a red light.
2. On your thermostat, hold the ►► button until the screen shows RF SETUP
3. Tap the ►► button, your thermostat & RF receiver will automatically pair.